

User manual InviSense moisture scanner

MEASUREMENT

The scanner is started by pushing the switch on the side of the scanner, see picture to the right. The scanner will then flash with a blue light.


The scanner is used together with our app for phone or tablet. It works with both iOS (iPhone) and Android. A detailed instruction for using the app can be found on our website: <https://invisense.se/downloads/>.

When the scanner is connected to your phone/tablet it will shine with a steady blue light.

When you are ready for a measurement, please point the scanner to the sensor and the measured value will show on your screen, see picture below.



When measuring, keep the scanner as close to the sensor as possible, preferably against the material in front of the sensor. On the edge of the measurement range the measured value can differ a few percentage points compared to the correct value.

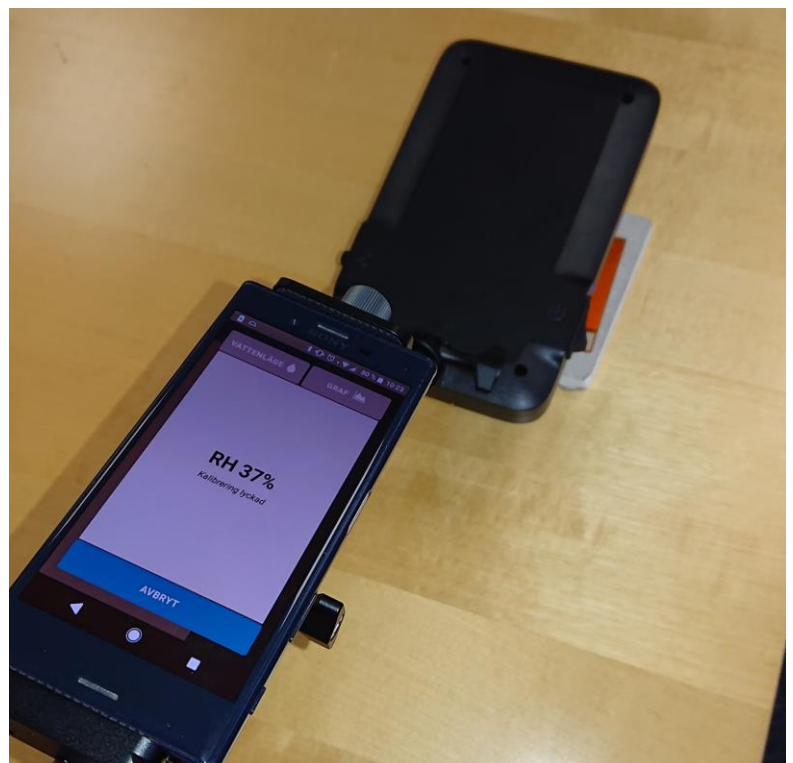

ACCESSORIES

The scanner is delivered in a bag case together with the following accessories:

- Short handle
- Expandable handle
- Phone/tablet holder
- Hex key for adjustments
- Charger



The phone/tablet holder is adjusted on the back of the holder. Each side of the holder is adjusted individually by loosening the gray lock. Fine adjustments are made by spinning the wheel on the side of the holder.



You can switch between the short and the adjustable handle by loosening the screw at the end of the handle.

